 



# ICZB-B1FC Series Filament LED Bulb




**Important: Read all instructions prior to installation**

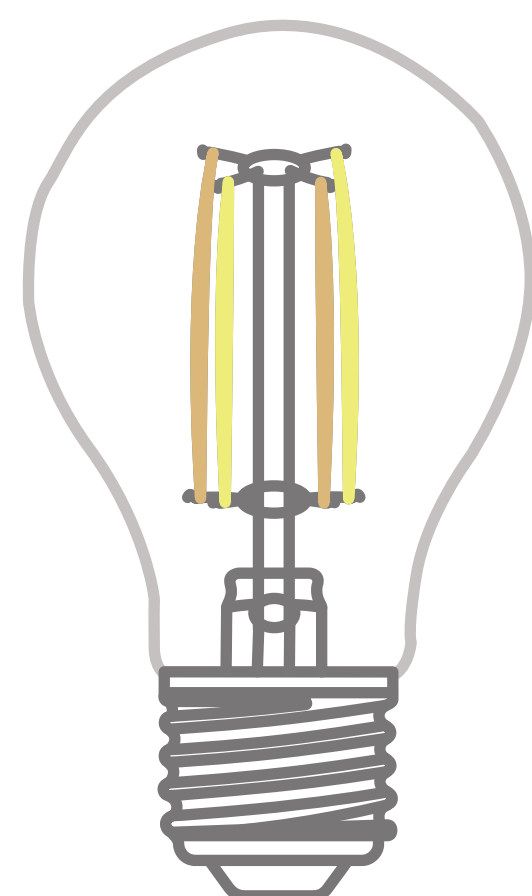

 
**ICZB-B1FC60**  
104mm x Ø 60mm

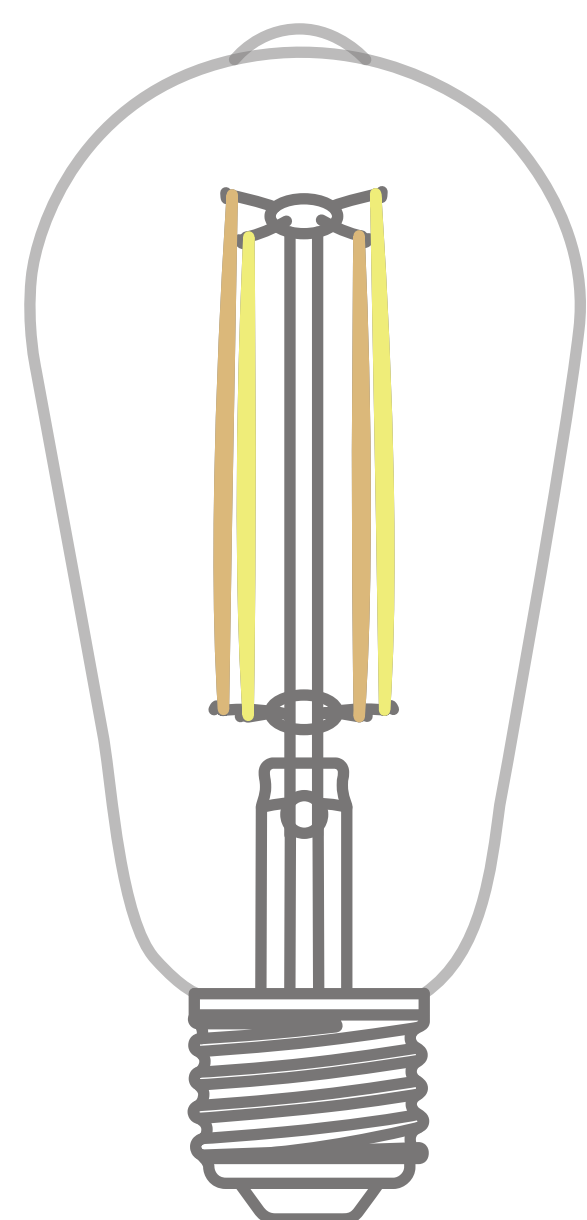

**ICZB-B1FC64**  
140mm x Ø 64mm

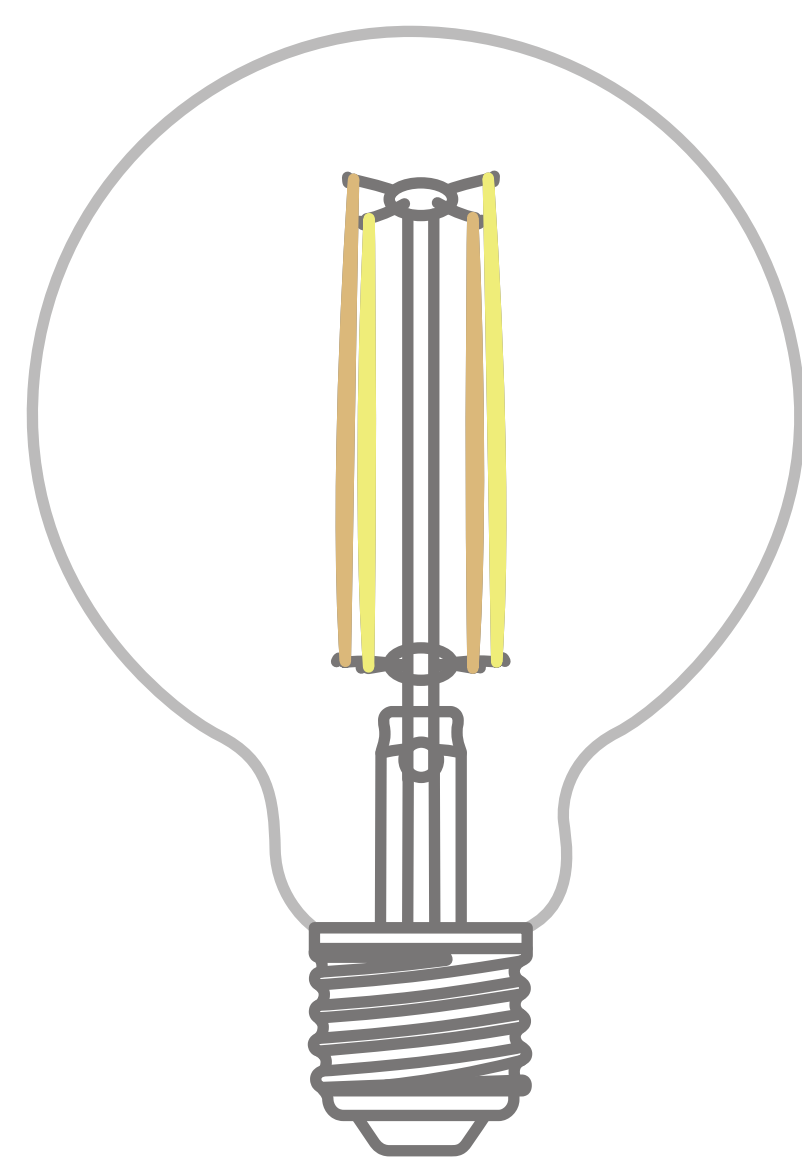 

**ICZB-B1FC95**  
134mm x Ø 95mm

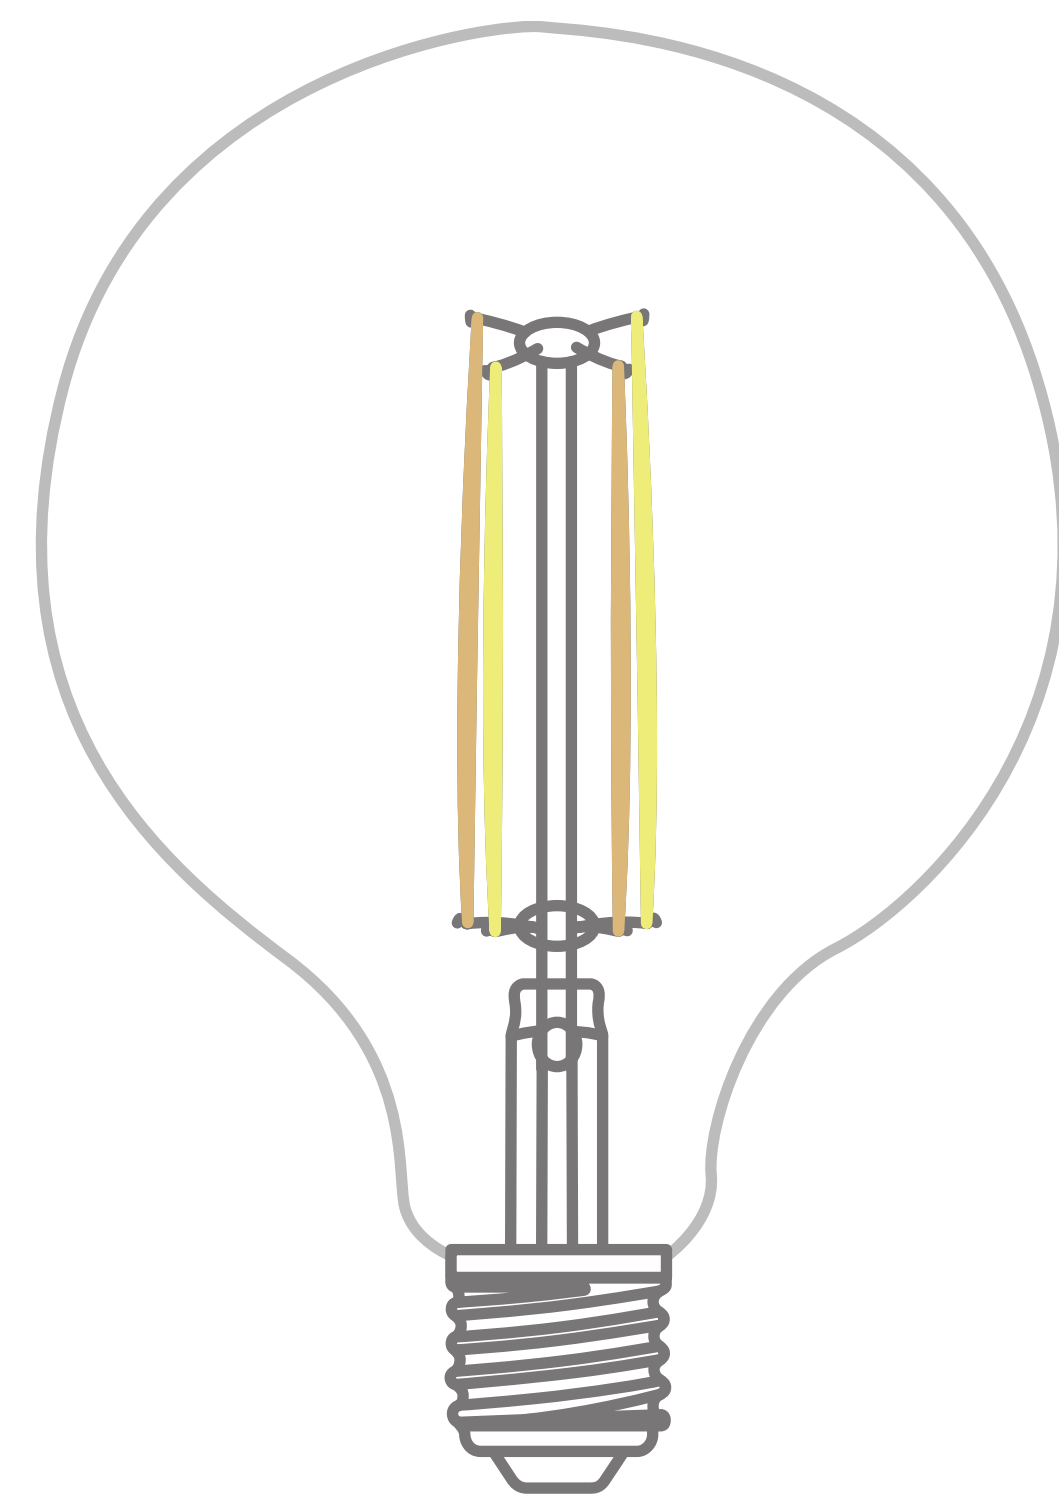 

**ICZB-B1FC125**  
175mm x Ø 125mm

# Zigbee Filament LED Bulb

## Features

- Zigbee filament LED bulb compatible with the latest Zigbee 3.0 protocol
- Compatible with universal ZigBee gateways and remotes (check our website for compatibility overview)
- The bulb can be controlled by up to 10 Zigbee remotes or keypads
- Adjustable color temperature 2700K - 6500K
- 100-240VAC 50Hz input voltage 50mA
- 7W LED can be compared with 60W incandescent lighting
- 806 Lumen
- E27 Base
- A++ Energy rating
- Radiofrequency: 2.4 GHz

## Safety and warnings

- The product is only suitable for inside use
- Do not expose the product to water or moisture
- Do not touch the product with wet hands.
- Do not use the product for other purposes than described in this manual
- Do not use the product if it is damaged or broken
- Do not try to repair the product

## Cleaning

- Switch off the mains power
- Clean the outside of the product carefully with a soft and slightly damp cloth
- Do not use any cleaning products or chemicals

## Instructions

### Installation

Screw the bulb into the E27 socket and turn on the wall switch.

### Add the bulb to a Zigbee gateway

This procedure is different for every Zigbee gateway, please check your Zigbee gateway manual.

- 1) In the Zigbee gateway App choose the option to add a light
- 2) Switch on the mains power to the bulb
- 3) When the bulb is successfully connected to the Zigbee gateway the bulb will flash and stay on

The bulb will appear in your Zigbee gateway App and can now be controlled.

### Connect the bulb to a Zigbee remote or keypad (Touchlink)

Follow these instructions to connect the bulb to a compatible Zigbee remote or keypad. Make sure the bulb and the remote are connected to the Zigbee gateway before proceeding.

- 1) Switch off the mains power to the bulb for 10 seconds and turn the power back on.
- 2) Hold the remote within 10 cm of the bulb and start the Touchlink procedure on the remote (please check your Zigbee remote manual for more information)
- 3) The light will flash when the remote is successfully connected to the bulb

### Factory reset

- 1) Turn on the bulb for a minimum of 10 seconds, switch off the mains power to the bulb
- 2) Switch the bulb mains power 5x On for 2 seconds and Off for 1 second.
- 3) Switch on the mains power again, the light will flash and stay on

The bulb is reset successfully.

